



World-Class Radiation Detectors

Alpha • Beta • Gamma • X Radiation

For a Safer World



IMI Inspector Alert™ V2 Radiation Survey & Contamination Meter

First Responders express appreciation for the Inspector's front panel slide switches, which can be operated while wearing safety gloves.



The IMI Inspector Alert™ V2 measures alpha, beta, gamma, and X-radiation using a 2-inch "pancake" GM detector with high sensitivity to common beta and alpha sources. The easy-to-read digital display shows readings in your choice of Dose Rate ($\mu\text{Sv/hr}$ or mR/hr) and Count Rate (CPM or CPS). The Total / Timer feature allows timed readings from one minute to 40 hours for precise measurement of low-level contamination. An audible alert sounds when the radiation reaches a user-adjustable level.

- Quickly alerts user to the presence of harmful levels of nuclear radiation
- Detects noble gases and low energy radionuclides
- Automatically compensates for GM tube dead time
- Will not jam in high radiation fields
- Meets CE Certification, RoHS compliant and WEEE standards

The Inspector Alert's Intuitive and Simplified User Interface requires minimal training.



Technical Specifications

Detector:	Halogen-quenched Geiger-Mueller tube Effective diameter 1.75" (45 mm) Mica window density 1.5–2.0 mg/cm ² Detects Alpha, Beta, Gamma, and X-radiation	
Display:	4-digit liquid crystal display with mode indicators	
Operating Range:	µSv/hr: .000 to 1,100 mR/hr: .000 to 110 CPM: 0 to 350,000 CPS: 0 to 6,500 Total: 0 to 9,999,000 counts	
Calibration:	Cesium-137 (gamma)	
Gamma Sensitivity:	3,340 CPM/mR/hr referenced to Cs-137 Smallest detectable level for I-125 is .02 mCi at contact	
Typical Efficiency:	For 4 pi at contact:	Efficiency
Isotope	Energy	
C-14 (Beta)	49 keV avg. 156 keV max.	5.3%
Bi-210 (Beta)	390 keV avg. 1.2 MeV max.	32%
Sr-90 (Beta)	546 keV and 2.3 MeV	38%
P-32 (Beta)	693 keV avg. 1.7 MeV max.	33%
Am-241 (Alpha)	5.5 MeV	18%
Accuracy:	±10% typical; ±15% maximum	
Alert Range:	µSv/hr: .001 to 500 mR/hr: .001 to 50 CPM: 1 to 165,000 CPS: 1 to 2,700 Beeper sounds the alert	
Timer:	Can set sampling periods of 1 minute to 40 hours	
Averaging Periods:	Display updates every 3 seconds, showing the average for the past 30-second time period at normal levels. The averaging period decreases as the radiation level increases.	
Count Light:	Red LED flashes with each count	
Audio:	Beeper chirps for each count (can be muted)	
Ports:	- Output: Stereo 3.5 mm jack sends counts to computers, data loggers, other CMOS-compatible devices, earphones, and educational data collection systems. 0–9 V, 1 kOhm impedance. - Input: 2.5 mm mono jack provides calibration input. 0–3.3 V, > 5 µs width, rising edge triggered.	
Anti-Saturation:	Readout holds at full scale in fields up to 100X the max. reading	
Temperature Range:	-20° to +50° C, -4° to +122° F	
Power:	One AA alkaline battery typically provides 2,000 to 4,000 hours battery life at normal background radiation levels.	
Size:	150 x 80 x 30 mm (5.9" x 3.2" x 1.2")	
Weight:	323 grams (11.4 oz) including battery	
Certifications:	CE Certified; Emissions: EN 55011:2009 +A1:2010 (Class B emissions limits); EN 61326-1:2006 (Class B) RF Emissions; Immunity: EN 61326-1:2006 (Annex C) Portable Test and Measurement Equipment; EN 61000-4-2:1995 (ESD); EN 61000-4-3:1997 (EM); RoHS Compliant; Meets WEEE standards	
Optional Accessories:	Computer Software and Cable; Red Protect® Boot; Wall Mount Holder; GeigerLink™ Kit; Wipe Test Plate	

Mica Window Sensitivity


Alpha - Down to 2.5 MeV; typical efficiency at 3.6 MeV is greater than 80%.

Beta - typical efficiency at 50 keV is 35%

Beta - typical efficiency at 150 keV is 75%.

Gamma and x-rays as low as 10 keV (typical)

Specifications subject to change without notice.

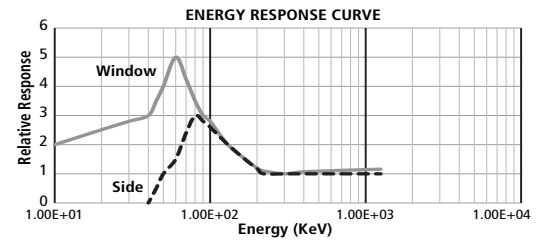

LCD Display



End Panel



Back



International Medcom, Inc.

100 Professional Center Dr., Ste 100

Rohnert Park, CA 94928

www.medcom.com

Tel: 707.823.0336

Fax: 707.823.7207

Toll Free: 1 (877) 378-1010

customer@medcom.com